



Solwise WL-NANO Quick Set-up Guide


1. Connect your antennas to the NANO unit

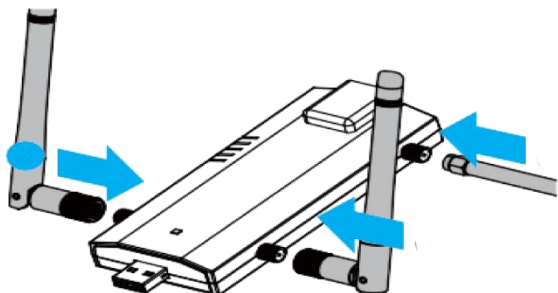

2. Connect the USB cable to power the NANO

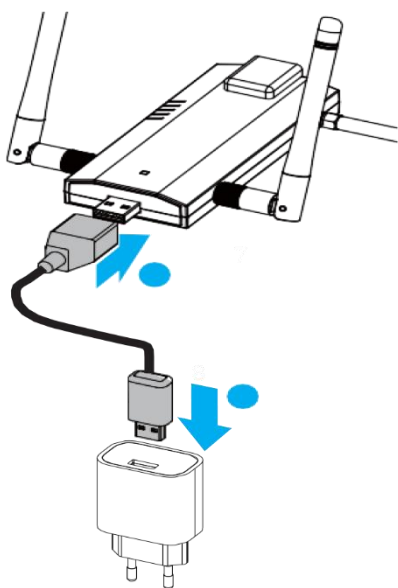


3. Wait 65 seconds until the NON boots up to connect

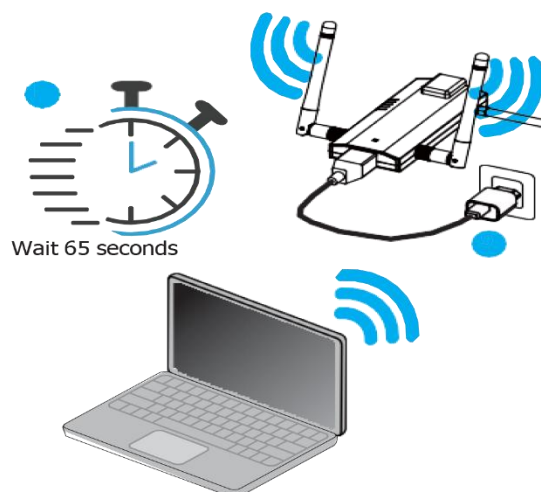

4. For Mobile scan the QR Code on the NANO to connect
For PC connect to the NANO WiFi – the network name and password are located on the QR Code sticker



For Mobile scan the QR Code
on the NANO to connect

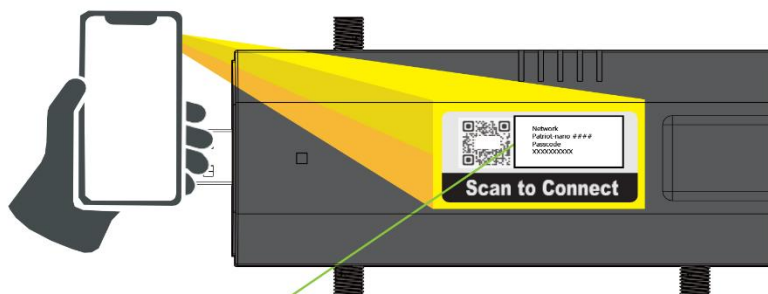


For PC connect to the
NANO WiFi:
the network name
and password are located
on the QR Code sticker

5. Open setup page and login.

Open a browser such as Chrome, Safari, Edge or Firefox.

Type 192.168.45.1 into the address bar to access the setup page.

Enter the same passcode that is shown on the QR Code sticker.

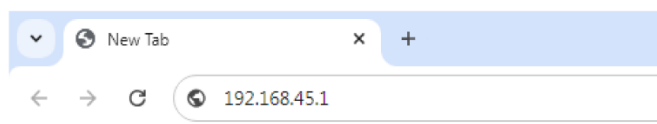

6. Select Campground WiFi to extend and you are good to go!

✱ Scan for nearby hotspot network			
Network Name	Signal	MAC	CH
Campground WiFi 1	100%	00:c0:ca:b0:66:bd	6
Campground WiFi 2	100%	0a:c0:ca:a5:f8:c5	6
Campground WiFi 3	100%	00:c0:ca:a5:f8:c5	6
Campground WiFi 4	100%	06:c0:ca:a5:f8:c5	6
Campground WiFi 5	100%	02:c0:ca:a5:f8:c5	6
Campground WiFi 6	100%	1c:b7:2c:75:2c:30	10

You have successfully finished.


			
Internet Area Network			
WiFi HotSpot Networks			
Status	Linked / Internet Accessible	IP address / IP Gateway	192.168.77.224 / 192.168.77.1
Network Name	Campground WiFi 1	DNS Servers	8.8.8.8 1.1.1.1
BSSID	0A:C0:CA:A5:F8:C5	WiFi Channel	CH6 (2.437 GHz)
Encryption	WPA2 PSK	Link Rate	52.0 Mbps

7. User Interface tips


The computer and smartphone icon shows how many and what types of devices are connected.



RV icon shows device settings.

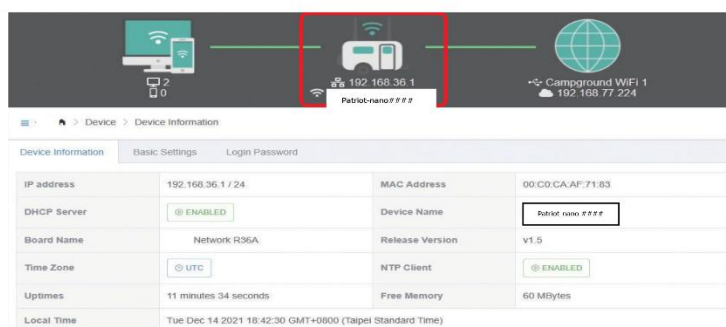

The Internet icon shows information on the WiFi hotspot you are connected to.

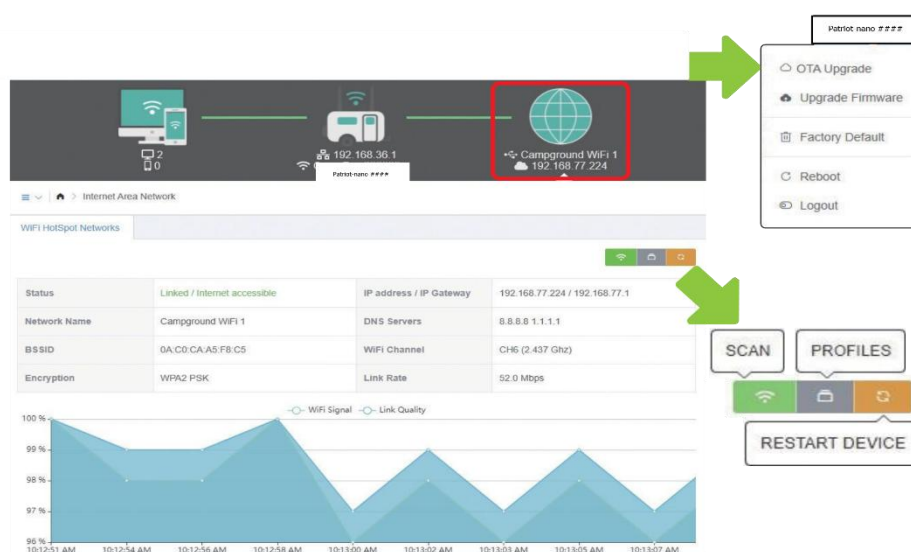

NANO and external antenna scenario suggestion

